





Specter Off-Road, Inc.

21600 Nordhoff Street, Chatsworth CA 91311 USA,
www.sor.com email: sor@sor.COM

Installation Instructions #112-06L-A & #112-06R-A Kick Vent Spring

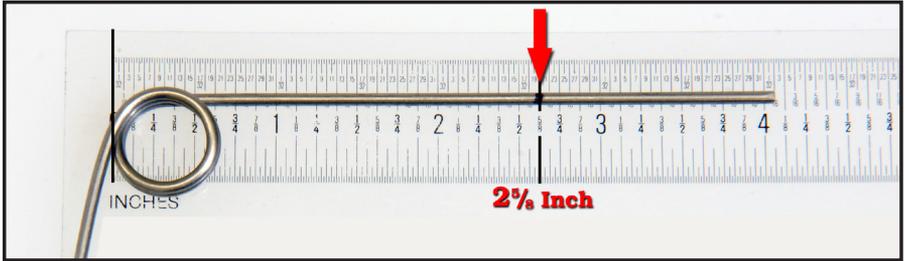

(Figure 1)

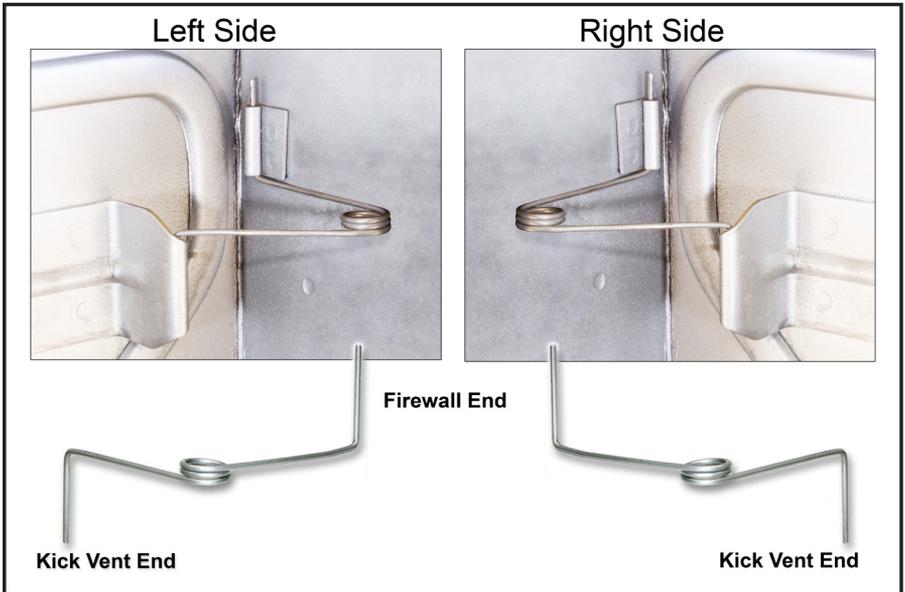

(Figure 2)

Measure and mark both arms of the spring at 2 5/8 inches from the outside of the spring coil (see figure 1). Then refer to the pictures to determine which way to bend spring arms to fit right or left foot vent location (see figure 2).

Fire wall end of the spring is bent upwards at 90 degrees. Vent door side of spring is bent downward at 90 degrees. Once installed and the vent door is tested for opening and closing correctly, slightly bend the top of the firewall end of the spring to keep it in place.