




Specter Off-Road, Inc.
21600 Nordhoff Street Chatsworth, CA 91311
(818) 882-1238 - www.sor.com


Booster Push Rod Length Adjustment

These instructions are for general use. Technical specifications vary slightly by model. Consult your Body and Chassis manual* for instructions specific to your Land Cruiser model.

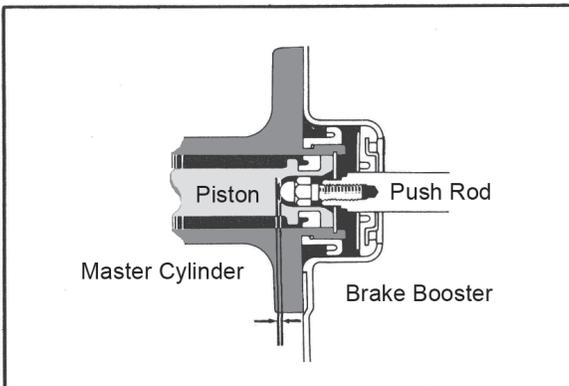


The length of booster push rod is adjusted to provide the specified clearance between the push rod end and the master cylinder piston.

Standard Clearance (w/o Vacuum)
0.1 - 0.5 mm (0.004 - 0.020 in.)

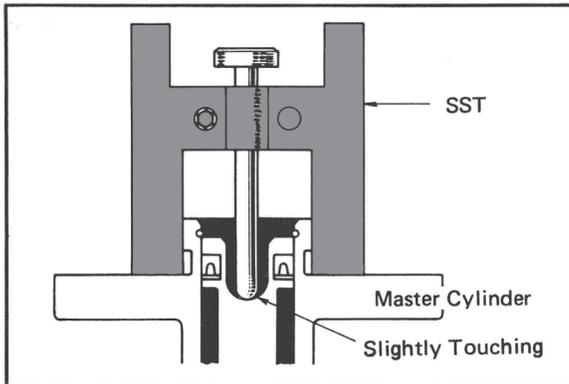

1. Set the Booster Adjustment Tool on the master cylinder, and lower the pin until its tip contacts the piston slightly.

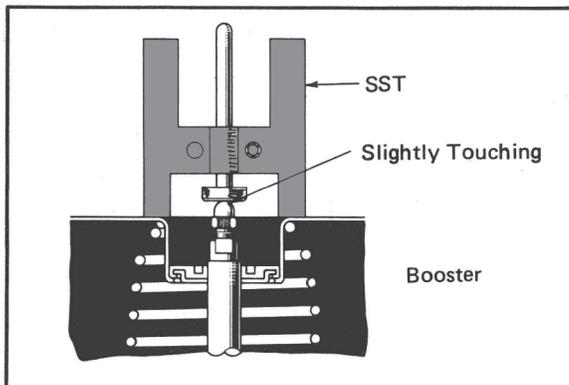

2. Turn the Booster Adjustment Tool upside down and set it on the booster. Then adjust the booster push rod length until the rod end contacts the pin head slightly.

*Factory manuals start on page 221 of the Specter Off-Road Catalog; www.sor.com/cat/221