



21600 Nordhoff St. Chatsworth, California 91311 USA  
(818) 882-1238 sor@sor.com www.sor.com

## #272-44 SummerTop® Windshield Channel Installation Instructions


**NOTE:** Please read this manual thoroughly before beginning the installation. After completing installation, keep this manual for future reference.

### Tools You Will Need

- Pencil
- Phillips head screwdriver
- Hammer
- Center punch
- Drill
- 1/8" drill bit
- Safety glasses

**CAUTION:** A loose windshield retainer may allow the top to disengage from the windshield, causing damage to the top and possible injury to the occupants of the vehicle. Make certain that the windshield retainer is securely fastened to the windshield at the time of first installation. Check the tightness of the mounting screws every three months. (Do not over-tighten.) Safety Glasses should be worn when installing this product.

### Parts and Hardware Identification

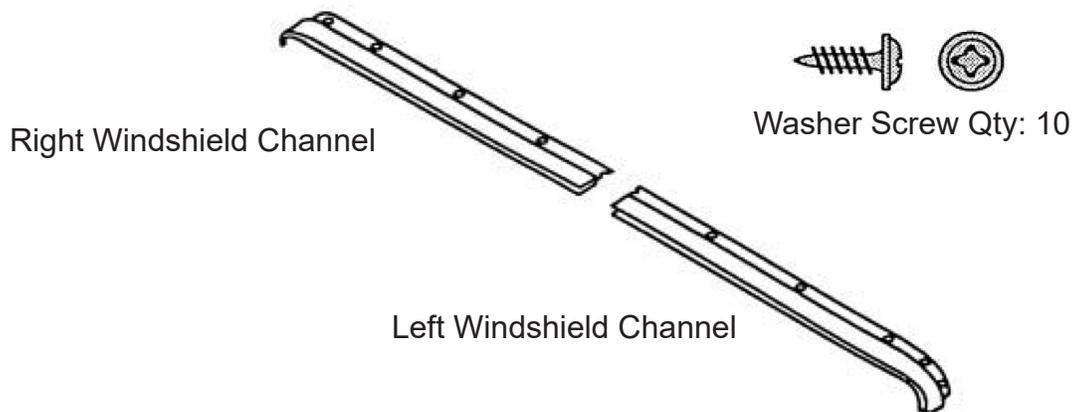

### LIMITED WARRANTY

Specter Off-Road, Inc. (SOR) warrants this product to be free from defects in material, for the terms specified below provided there has been normal use and proper maintenance. This warranty applies to the original purchaser only. All remedies under this warranty are limited to the repair or replacement of any item or items found by the factory to be defective within the time period specified.

If you have a warranty claim, first you must call the factory at the number provided above for instructions. You must retain proof of purchase and submit a copy with any items returned for warranty work. Upon completion of warranty work, SOR will return the repaired or replaced item or items to you freight prepaid. Damage to our products caused by accidents, fire, vandalism, negligence, misuse, Acts of God, or by defective parts not manufactured by us, is not covered under this warranty.

THE TERMS OF SOR'S WARRANTY ARE AS FOLLOWS: 90 DAYS FROM DATE OF PURCHASE.





## Windshield Channel Installation

1. Center the Windshield Channels on top of the windshield frame butting the halves together and against the top pinch weld of the frame.
2. Use the channels as a template to mark four holes for each half of the channel and one between the two halves of the channel. You will not need to mark the last hole on the outer ends\*.
3. Center punch and drill nine 1/8 inch holes where you marked.
4. Use 9 pan head washer screws to secure the channels to the windshield frame (see Figure 1).

**\*PLEASE NOTE:** The FJ40 Land Cruiser does not use the last hole at the outside tip of each channel in the area where it bends down.

