



21600 Nordhoff Street, Chatsworth, CA 91311 PH:  
(818) 882-1238

E-Mail: [sor@sor.com](mailto:sor@sor.com) Internet: <http://www.sor.com>

---

## ***INSTALLATION INSTRUCTIONS***


**SOR 80 Series Tuff Tread Cargo Liner #345-804**

### **SPECTER OFF-ROAD TUFF TREAD LINER**

The SOR 80 Series Tuff Tread Cargo Liner was designed for multiple installation configurations and therefore trimming may be required for your application. If you decide to trim for your rear “jump” seat latches, tie-down loops, rear seat belt anchors or passenger seat latches, make sure cuts that intersect do not cross. Be sure to use a new blade in your utility knife and make rounded corner cuts. NO RETURNS ON CUT AND/OR TORN TUFF TREAD CARGO MATS.

SOR 80 Series Tuff Tread Cargo Liner can also be installed under the rear chrome scuff plate. If desired:

- 1). Unscrew the Phillips head screws holding the scuff plate down.
- 2). Slide the cargo mat under the scuff plate to the desired position.
- 3). Replace the screws to their original position.

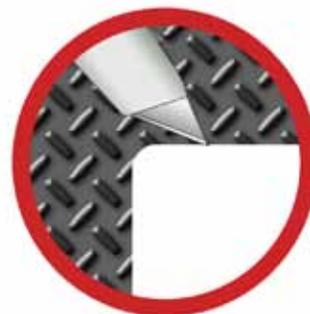

**Round Corner Cuts**



**Do NOT Cross Cuts**